


Hot Press

SuperJet

Jet Mounter Supplies – Instructions for use


Making an adhesive coated board.

1. Place the board between the rollers of the Jet Mounter. Wind down the height control wheels squarely until the rollers firmly & evenly grip the board. Then pass the board through the Jet Mounter using the foot control.
2. Take a sheet of double sided mount film & fold back 25mm (1") of release paper on one side of the film. Firmly crease the fold of the release paper & line up the film squarely on the board. Attach the adhesive to the board applying pressure from the centre & then outwards towards the sides. (Always check your board is clean - before applying any adhesive).
3. Feed the leading edge of the board into the rollers with the double sided mount film upper most - until the rollers grip the board.
4. With the double sided mount film held firmly over the safety bar & the top roller - start the Jet Mounter and allow the board to be pulled through - removing the release paper as it travels through.

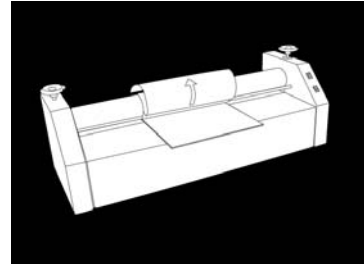


Mounting your artwork.

5. Take an adhesive coated board and fold back 25mm (1") of release paper, crease the fold.
6. Check that your artwork is free from dust & dirt. Carefully line it up with the top edge of the board & attach it to the exposed adhesive, applying pressure from the centre & then outwards to the left and right.
7. If the board is bigger than the artwork, place the artwork centrally and score through the release paper. This forms a "window". From the top of the window, peel back 25mm (1") of release paper, crease the fold and attach the artwork squarely.
8. Please note, if the artwork is to be laminated, the board will need to be at least 25mm (1") longer than the artwork.
9. Feed the leading edge of the board into the Jet Mounter & pull the artwork over the safety bar & top roller Start the Jet Mounter & as the board travels through maintain tension on the artwork and remove the release liner.
10. Trim the board to size and frame.

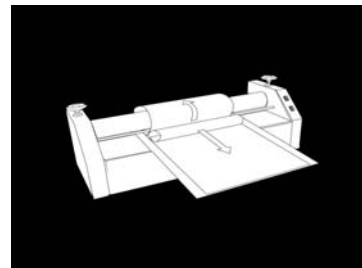

Laminating your artwork.

11. To apply Super Jet laminating films to mounted artwork, take a suitably sized piece of film & fold back 25mm (1") of release paper, crease the fold. (The film should be at least 25mm (1") longer than the artwork).
12. Line up the film making sure that all the artwork will be covered by the laminate & carefully attach the film to the opposite end of the board to the artwork. (Never attach the film directly to the artwork as bubbles will be formed which the Jet Mounter cannot remove.) It is important to keep the film adhesive away from the artwork until the whole assembly is under pressure & travelling through the Jet Mounter.
13. Feed the leading edge of the assembly into the Jet Mounter & pull the film firmly & squarely back over the safety bar & top roller to create tension on the film. Check that no dust or dirt is present on the artwork as this would be trapped under the film.
14. Start the Jet Mounter and maintaining the film tension, remove the release liner as the assembly travels through the Jet Mounter.
15. Trim & frame artwork as required.

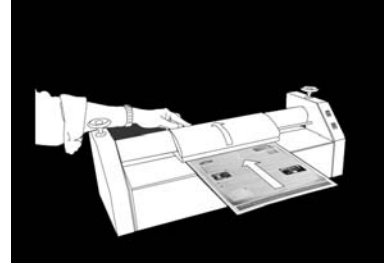

Should you wish to laminate artwork that is not mounted to a board, a non stick carrier sheet is required. Please contact us for more details.

Hot Press Ltd

Units 7/8 Edgemoad Close Round Spinney Northampton NN3 8RG UK

Tel +44 (0)1604 495444 Fax +44 (0)1604 495430

email: info@hotpress.co.uk website: www.hotpress.co.uk